

Carmen Prestige

Sunlounger

Technical file



FABRIC



STACKABLE



RECLINABLE



WHEELS



SPARE PARTS



CUSTOMIZABLE



RECYCLED MATERIAL



RECYCLABLE

Description

Frame

Made of polypropylene resin.

Reinforced with mineral filler and a special formulation with UV treatment.

Ribbed design that guarantees structural robustness against deformation and breakage.

Fabric

Breathable fabric constructed with double weft and double warp, 1.25 mm thick and 870 g/m² density.

Made of a continuous polyester thread core (30%) coated with PVC (70%).

Resistant to UV rays, with a light resistance index of 8.

Antimicrobial protection that protects against bad odors and moisture.

Fire resistance due to flammability retardant according to EN-1021-2:2015 regulations.

Elastic cord

Made of a latex core (69%) coated with polypropylene (31%).

Diameter: 7,2 mm.

Density: 3,87 gr/m.

Resistance to breakage: 130 kg.

Finished with an injected plastic end.

Security


Folding support designed to prevent hands and fingers from being caught.

Support regulator designed to avoid sudden movements during height regulation.

Carmen Prestige

Sunlounger

Capacity

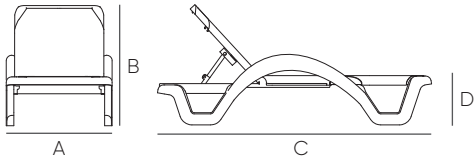

A - 75 cm
B - 88 cm

C - 198 cm
D - 37 cm

14,6 kg

Package	Units	Measures	Weight	Volume
Box	2 u.	201x78,5x63 cm	35,8 kg	1,00 m ³
Pallet	14 u.	200x78x178 cm	226,4 kg	2,78 m ³

Loading capacity	Mega trailer	Cont. 20'	Cont. 40'	Cont. 40' High Cube
Carmen Prestige	520 u.	160 u.	330 u.	360 u.

Finishes

Frame

Resin

Prestige



Wood



Bronze



Dark grey

Fabric

Basic



01/00



02/00



03/00



04/00



07/00



10/00



12/00



16/00



21/00



30/00



32/00



36/00



38/00



40/00



50/00



61/00



Carmen Prestige

Sunlounger

Maintenance plan

Weekly

Visual check of the general condition, removing dirt and ensuring there are no broken parts or damage that could be a danger to users.

Monthly

- Check fabric tension.
- Check the structural strength and stability.
- Check the condition of wheels and strings.

Annual

- Check the condition of the fabric and ensure it is correctly tensed.
- Check the backrest and adjuster are working correctly.
- Replace any worn or damaged parts.

Wintering and storage

- Clean with soapy water and a soft cloth.
- Remove damp stains, sand and seawater.
- Store horizontally in a dry place in stacks of 10 units.

Observations

- Always use Balliu spare parts.
- Balliu does not manufacture parts for other brands.
- If the product is subject to heavy use, maintenance checks must be carried out more frequently.
- Do not use the product until maintenance is completed.
- Consult the maintenance instructions.
- Do not use aggressive chemicals to clean the product.
- Always use products with a neutral pH.
- Use a soft cloth to clean the product.

