

# Lola Prestige

Sunlounger

Technical file



FABRIC



STACKABLE



RECLINABLE



WHEELS



SPARE PARTS



CUSTOMIZABLE



RECYCLED MATERIAL



RECYCLABLE

## Description

### Frame

Made of polypropylene resin.

Reinforced with mineral filler and a special formulation with UV treatment.

Ribbed design that guarantees structural robustness against deformation and breakage.

### Fabric

Breathable fabric constructed with double weft and double warp, 1.25 mm thick and 870 g/m<sup>2</sup> density.

Made of a continuous polyester thread core (30%) coated with PVC (70%).

Resistant to UV rays, with a light resistance index of 8.

Antimicrobial protection that protects against bad odors and moisture.

Fire resistance due to flammability retardant according to EN-1021-2:2015 regulations.

### Elastic cord

Made of a latex core (69%) coated with polypropylene (31%).

Diameter: 7,2 mm.

Density: 3,87 gr/m.

Resistance to breakage: 130 kg.

Finished with an injected plastic end.

### Security


Folding support designed to prevent hands and fingers from being caught.

Support regulator designed to avoid sudden movements during height regulation.

# Lola Prestige

## Sunlounger

### Capacity

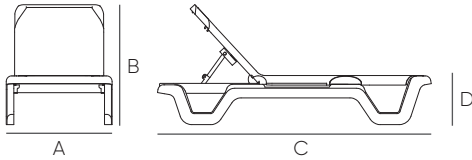

A - 75 cm  
B - 95 cm  
C - 198 cm  
D - 37 cm

14,6 kg

Package	Units	Measures	Weight	Volume
Box	2 u.	201x78,5x63 cm	35,8 kg	1,00 m <sup>3</sup>
Pallet	14 u.	200x74x178 cm	226,4 kg	2,78 m <sup>3</sup>

Loading capacity	Mega trailer	Cont. 20'	Cont. 40'	Cont. 40' High Cube
Lola Prestige	520 u.	160 u.	330 u.	400 u.

### Finishes

#### Frame


##### Resin

##### Prestige



#### Fabric

##### Basic

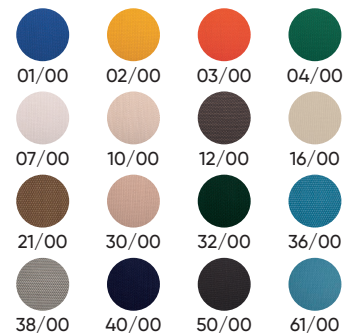



# Lola Prestige

## Sunlounger

### Maintenance plan

#### Weekly

Visual check of the general condition, removing dirt and ensuring there are no broken parts or damage that could be a danger to users.

#### Monthly

- Check fabric tension.
- Check the structural strength and stability.
- Check the condition of wheels and strings.

#### Annual

- Check the condition of the fabric and ensure it is correctly tensed.
- Check the backrest and adjuster are working correctly.
- Replace any worn or damaged parts.

#### Wintering and storage

- Clean with soapy water and a soft cloth.
- Remove damp stains, sand and seawater.
- Store horizontally in a dry place in stacks of 10 units.

#### Observations

- Always use Balliu spare parts.
- Balliu does not manufacture parts for other brands.
- If the product is subject to heavy use, maintenance checks must be carried out more frequently.
- Do not use the product until maintenance is completed.
- Consult the maintenance instructions.
- Do not use aggressive chemicals to clean the product.
- Always use products with a neutral pH.
- Use a soft cloth to clean the product.

